


**ФРОНТАЛЬНЫЙ
ПРИСТАВНОЙ
ЭЛЕМЕНТ**


202.04.0XX (25x115)

202.06.0XX (25x80)

ИНСТРУКЦИЯ ПО СБОРКЕ

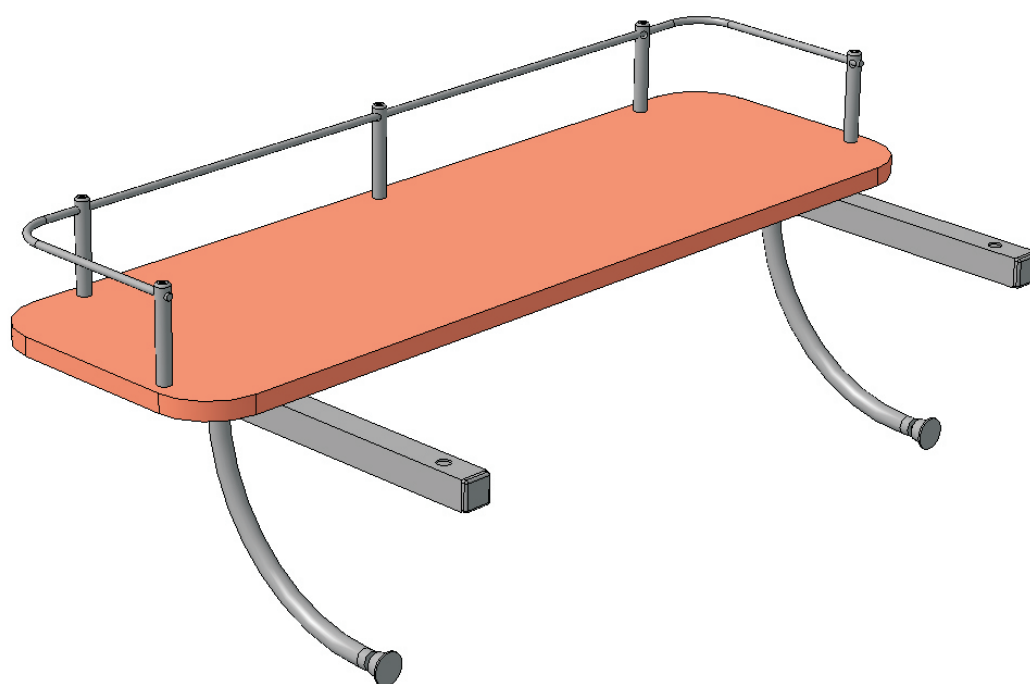

Обозначение крепежа

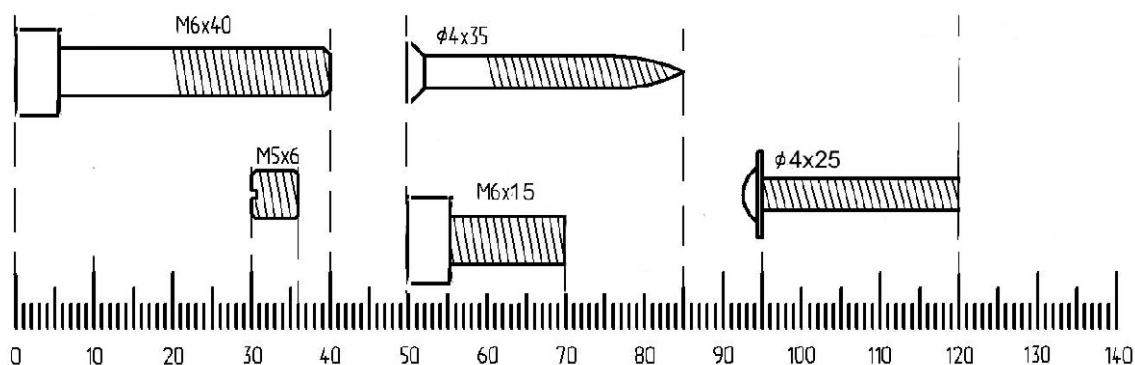







Необходимый инструмент




Фурнитура

A 2x M6x40	B 2x M6x15	C 10x 4x35	D 6x M5x6	E 6x M4x25	202.04.0XX
A 2x M6x40	B 2x M6x15	C 8x 4x35	D 5x M5x6	E 5x M4x25	202.06.0XX


Комплектующие

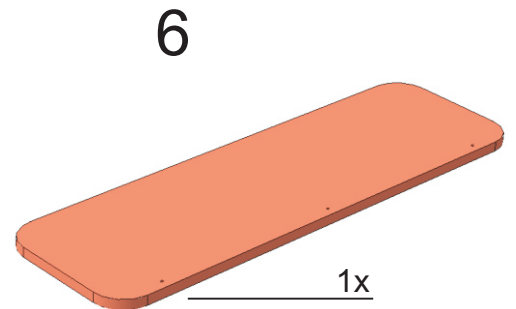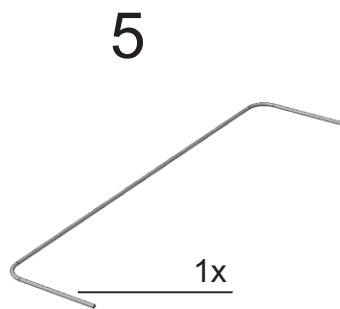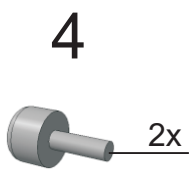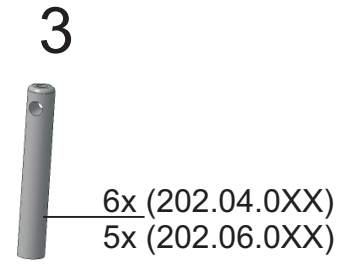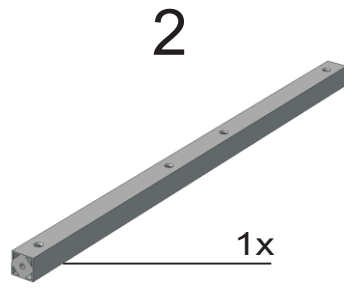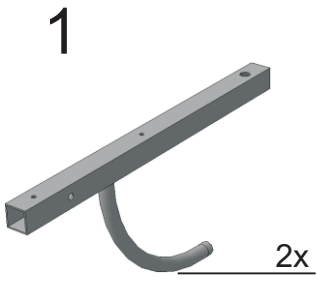

1

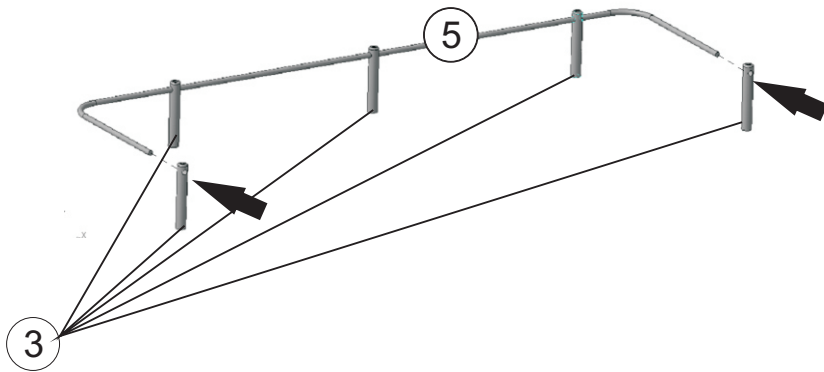


2

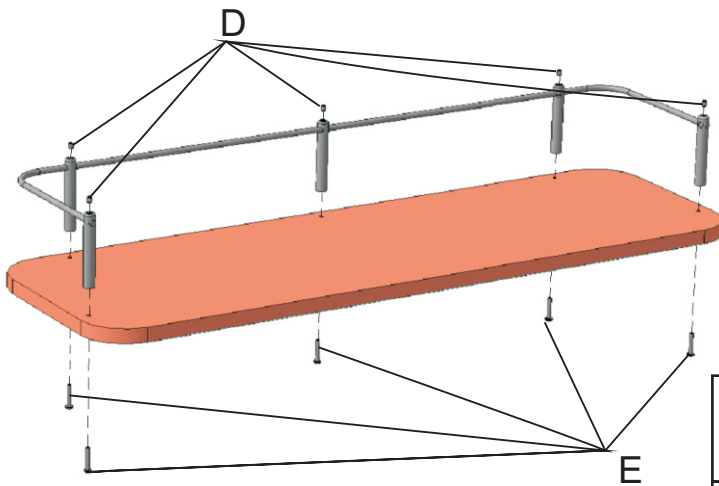


202.04.0XX	D		E	
	6x	M5x6	6x	M4x25
202.06.0XX	D		E	
	5x	M5x6	5x	M4x25

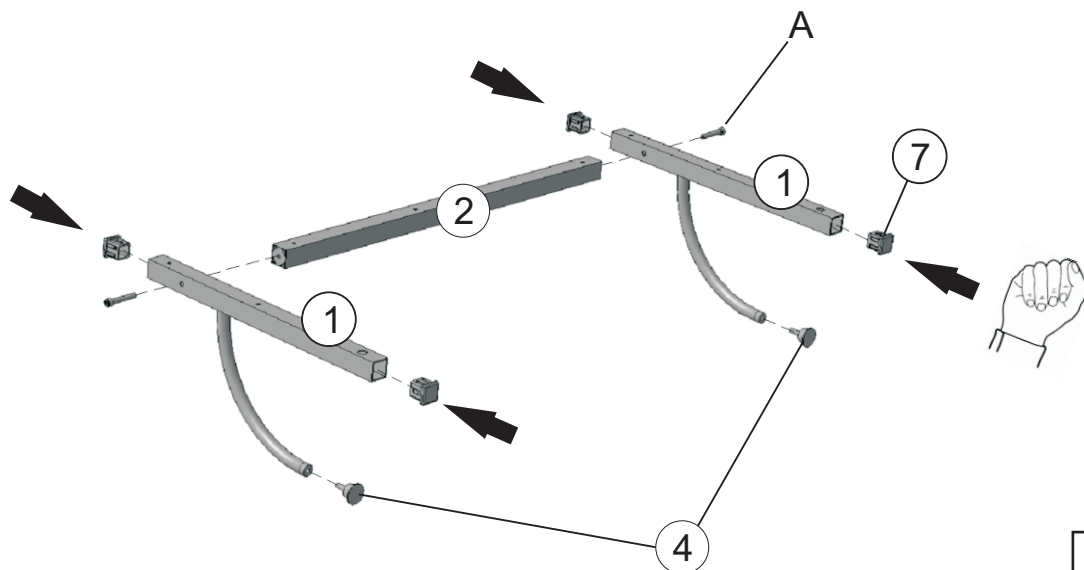

3





A	
2x	M6x40

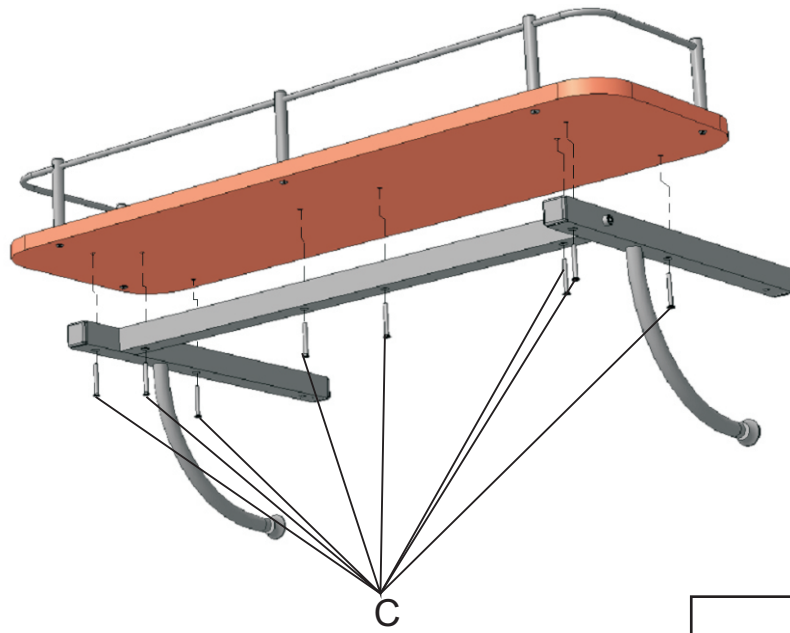
4



202.04.0XX	C	
	10x	4x35
202.06.0XX	C	
	8x	4x35

5

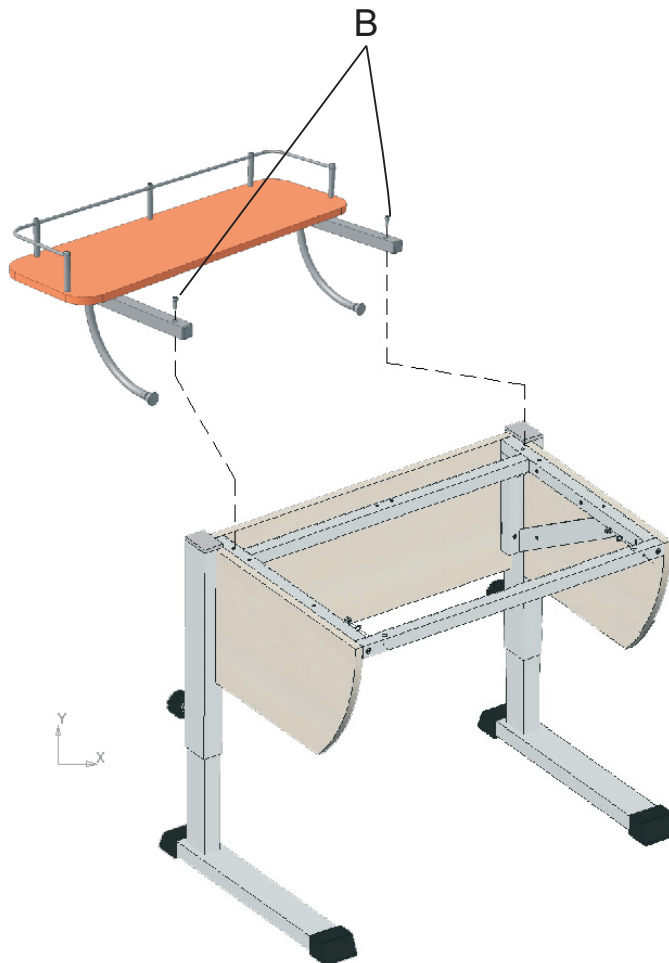

	B	
2x		M6x15